CONNECTING:

Rear view of CD Player:



- 1) Outputs left (L) and right (R) channel.
- 2) Coaxial output (to a converter D/A).
- 3) Power plug.

DETAILS OF FUNCTIONS:

Front of CD Player:



- 4) Disc tray.
- 5) Display (see details beside).
- 9) Stop: stop functions Play & Repeat.

6) Open/close

10) Pause.

7) Previous track.

11) Play.

8) next track.

12) Stand-by: stand-by cancels all functions.

REMOTE CONTROL:

Keys 6 to 12 have the same functions as on the front panel.

- 14) Numerous keys (0-9): *choose a track by keying in its number.*
- 15) & 16) Fast search in track.
- 18) A-B repeat key: when the disc is playing, one keying specified the beginning (A) and another keying specified the end (B). The selected A-B zone will be repeated till another keying.
- 19) Repeat key. Repeats the CD.
- 20) SCAN: scan 10 seconds of each tracks.
- 21) SHUF: (SHUFFLE is written on display): *plays tracks in random*.



22) PROG: programmation of sequences. Using:

First press PROG. Select the first track then press PROG. For every track added, total time of the program appears. To add tracks, select track then press PROG. Press PLAY to read the program. Press 2 times on STOP to cancel the program.

23) TIME:

displays by successive keying:

 ${\mathcal D}$ time of each tracks (mention TIME appears).


© Total passed time of the disc (mentions TOTAL & TIME appears on the display).

DISPLAY:

13) Stand-by led.

Numbers 10) to 23) correspond to functions of the remote control with the same numbers.

- 24) Selected track;
- 25) Time of selected track;

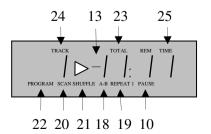

E.C. MARKING:

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

GUARANTEE:

The guarantee is **two years** long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

CLEANING:

Before any cleaning, switch off your CD player (3). Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. Never try to clean up inside the appliance.

TECHNICAL	CD PLAYERS			
SPECIFICATIONS	CD50 MK3	CD80 MK3	CD100 MK3	CD200
Power supply:	15,5+5,5 VA	15,5+5,5 VA	15,5+160 VA	15,5+160 VA
Total of capacitors:	14 000μF	17 000 μF	17 000 μF	17 000 μF
Output stages:	symetrical stage	symetrical stage	symetrical stage	differential stage/
	discrete/	discrete/	discrete/	discrete
Output level:	$2 V_{RMS}$	$2,5 V_{RMS}$	$2,5 V_{RMS}$	$2,5 V_{RMS}$
Output Impedance:	1 kΩ	750 Ω	750 Ω	750 Ω
Converter (D/A):	24 Bit / 96 kHz	24 Bit / 96 kHz	24 Bit / 96 kHz	24 Bit / 192 kHz
Digital Output :	Coaxiale	Coaxiale	Coaxiale	Coaxiale
Signal/Noise:	95 dB	95 dB	95 dB	105 dB
Distorsion at 1kHz:	(< 0,002 %)	(< 0,002 %)	(< 0,002 %)	(< 0,002 %)
Frequency response:	(5-20 kHz)	(5-20 kHz)	(5–20 kHz)	(5-20 kHz)
Rising time:	2 μs	2 μs	1,5 µs	1,5 μs
Dimensions (mm):	440x280x90	440x280x90	440x280x90	440x280x90
Weight:	5 kg	5 kg	7 kg	7 kg

Specifiactions are subject to modifications

ATOLL ELECTRONIQUE® is a French Company who conceive, manufacture and sales all its products.

You have just bought a CD player. with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your CD player, please read carefully this manual.

CAUTIONS:

- Put your CD player in a dry and well ventilated place, far from source of heat:
- Do not put something on your CD player;
- Do not make any plug in when the CD player is on;
- Avoid any short-cut;
- Respect polarity + & and switch left & right;
- Do not put your CD player too close from a Tuner because of disagreement in HF reception.

You will find enclosed:

- a CD player;
- a remote control with batteries;
- a powerlead;
- a modulation cable;
- this manual with the certificate of guarantee.

GUARANTEE - CD PLAYERS

To present to your dealer with the invoice when returning back the appliance.

ATOLL ELECTRONIQUE Blvd des Merisiers 50370 BRECEY FRANCE

Dealer stamp

Date of purchase:

><

Place of purchase:

Buyer signature:

OWNER'S MANUAL

CD Player

CD50 - CD80 - CD100 - MK 3 CD200

